

ebook series #5


Drilling & Driving

How to Avoid the Most Common Mistakes


Sample Download  **Pocket Screw Chart** 

EZ Match: Pocket Hole Screw Sizes

HORIZONTAL POCKET JOINTS

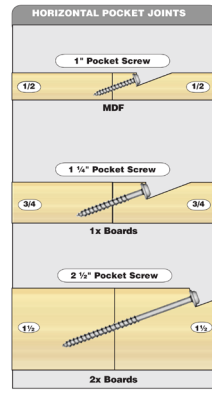

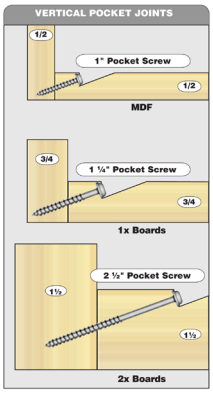

VERTICAL POCKET JOINTS



Board	Screw Size
1/2" (12mm)	1" (25mm)
5/8" (16mm)	1" (25mm)
3/4" (19mm)	1-1/4" (32mm)
7/8" (22mm)	1-1/2" (38mm)
1" (25mm)	1-1/2" (38mm)
1-1/8" (32mm)	1-1/2" (38mm)
1-1/4" (32mm)	2" (51mm)
1-3/8" (36mm)	2" (51mm)
1-1/2" (38mm)	2-1/2" (64mm)

Coarse or Fine?
 Use coarse-thread pocket hole screws with softwood-like pine and plywood. Use fine-thread screws with hardwoods—like oak, maple, walnut, and cherry.


Coarse Thread - Softwood


Fine Thread - Hardwood

[\(See on Web\)](#)




EZ Corner Clip

THE EZ WAY TO BUILD
BOXES & CABINETS

VIDEO

[EZWOODSHOP.COM](http://www.ezwoodshop.com)

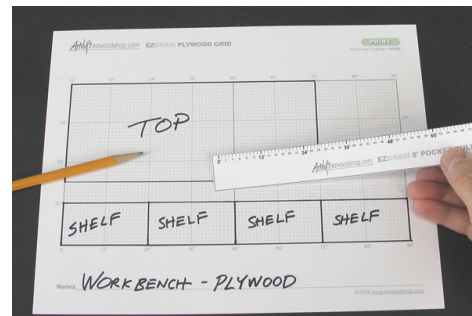



Design Your Own Projects

Unique set of printable templates and graph paper allow you to sketch and design your own wood projects. No software required—just use a pencil! Combo pack includes SIX different project design tools.

 **Find out More**

<http://www.ezwoodshop.com>

EZ Match: Pocket Hole Screw Sizes

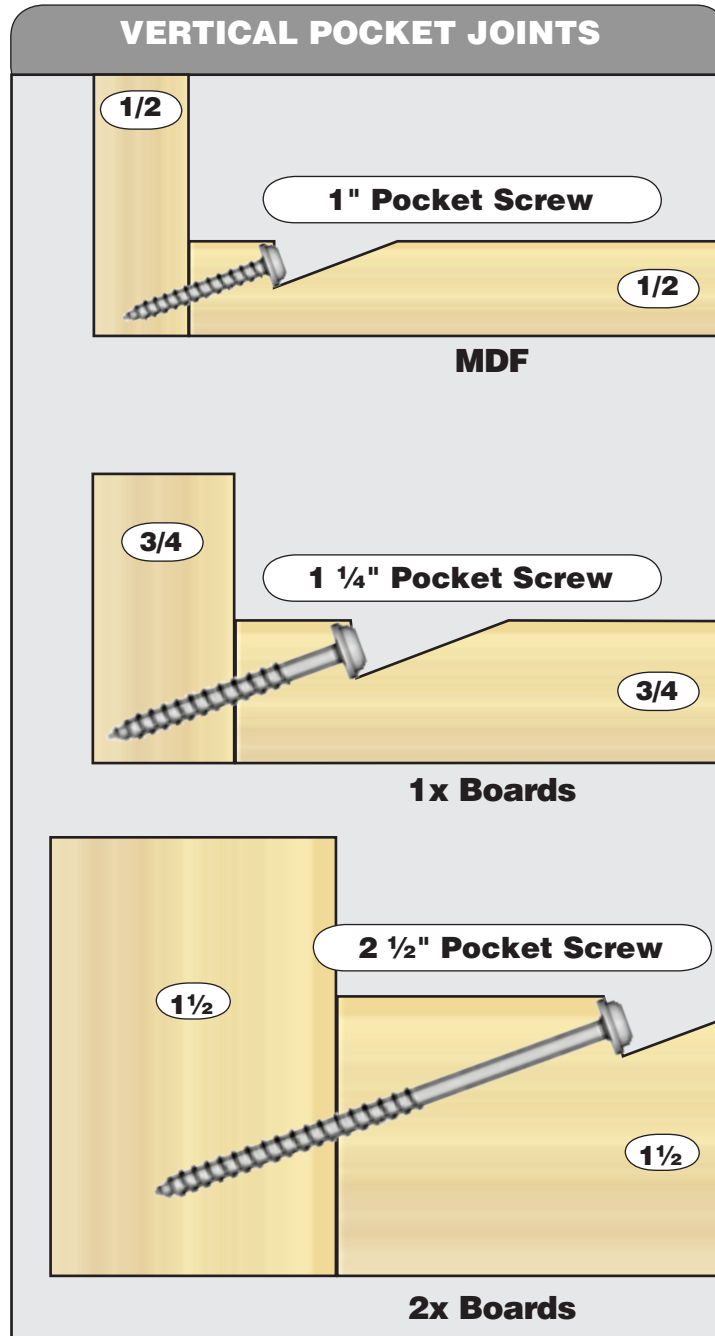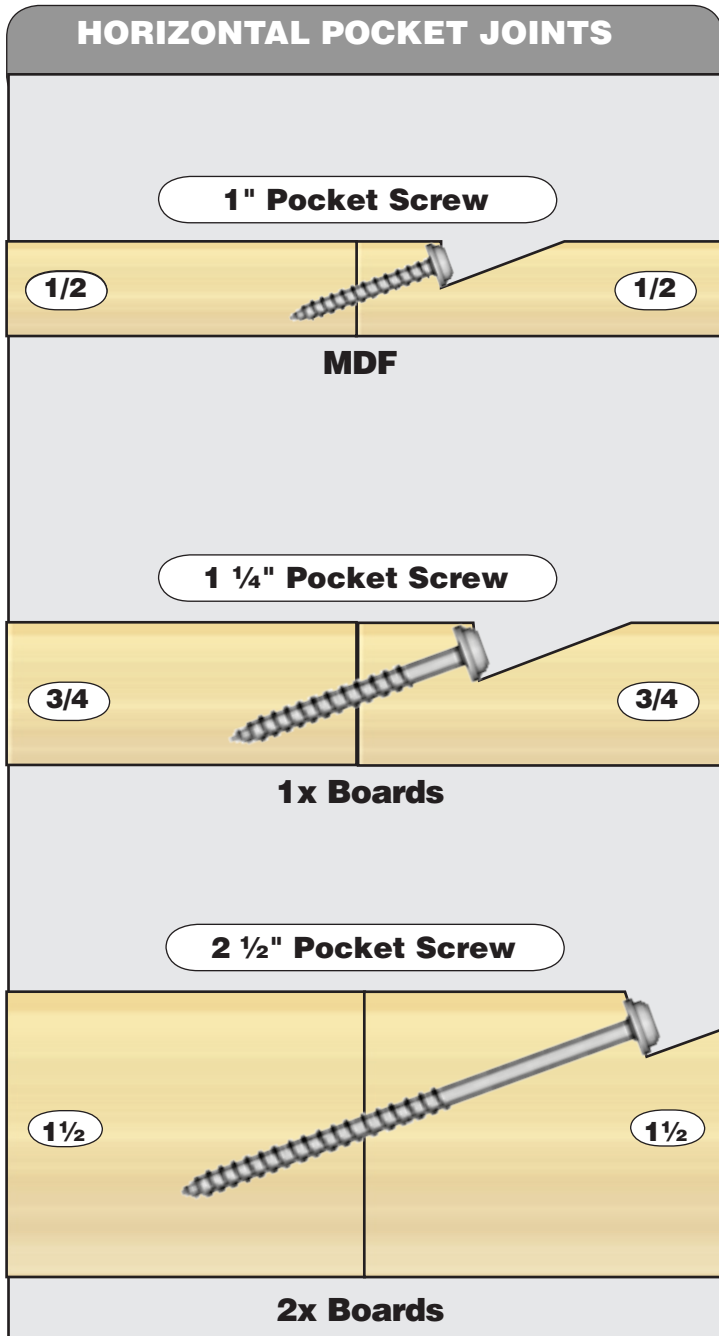

Pocket Screw Chart

Board	Screw Size
1/2" (13mm)	1" (25mm)
5/8" (16mm)	1" (25mm)
3/4" (19mm)	1-1/4" (32mm)
7/8" (22mm)	1-1/2" (38mm)
1" (25mm)	1-1/2" (38mm)
1-1/8" (29mm)	1-1/2" (38mm)
1-1/4" (32mm)	2" (51mm)
1-3/8" (35mm)	2" (51mm)
1-1/2" (38mm)	2-1/2" (64mm)

Coarse or Fine?

Use **coarse-thread** pocket hole screws with **softwoods**—like pine and plywood. Use **fine-thread** screws with **hardwoods**—like oak, maple, walnut, and cherry.

Coarse Thread - Softwood



Fine Thread - Hardwood



See on Web